

**Operating Instructions
Phosgene Cassette
(Part Number: 084060)**


Applications:

The Chameleon is the only hands-free, power-free, chemical detector for gases and vapors **in air**, allowing First Responders, Firefighters, EMS, Police Officers and Military to detect the presence of hazardous chemicals. No liquid sample required. The Chameleon may even be immersed in salt water or fresh water without affecting its performance. Developed under funding by the United States Marine Corps, the Chameleon is ideal for users to screen unknown hazards in their environment.

According to a report by the United Nations Environment Program, the International Labor Organization and the World Health Organization, firefighters are at risk from phosgene formed when chlorinated hydrocarbons and PVC are heated, such as during a fire or welding process. Phosgene exposure may also occur from leaks at production facilities or during transportation.

Specifications:

The chemical sensor in the phosgene cassette shows an easy to see color change. Half of the sensor window will change color as shown in the example below:

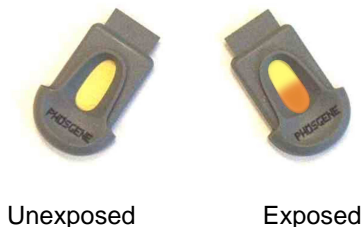

Description	Concentration	Reaction Time
Phosgene	1 ppm	3 minutes

Interferences:

The phosgene cassette was exposed to saturated vapor concentrations of toluene, bleach, DEET, gasoline, diesel fuel and JP-8 jet fuel for one hour. No false positive or false negative readings were observed. Repeated immersion in a layer of oil/fuel on top of salt water had no effect on the performance of the phosgene cassette.

Operating Instructions:

1. Expiration date marked on packaging is based on storage at or below 77°F/25°C. Storage at higher temperatures reduces shelf life.
2. Product shelf life when stored at 122°F/50°C is thirty days.
3. At time of use - remove cassette from its protective pouch.
4. Holding cassette with text facing up, slide cassette into Chameleon armband until the cassette firmly snaps into the armband.
5. Periodically view the cassette to observe color change in half of the sensor window.
6. Discard cassette after color change is observed or after 24 hours of use.
7. DO NOT use cassette beyond 24-hour service life.

WARRANTY EXCLUSIONS AND LIMITATION OF LIABILITY

IF THE USER DOES NOT ACCEPT THE FOLLOWING TERMS, THE USER SHOULD NOT USE THE CHAMELEON CASSETTE AND ARMBAND.

THE CHAMELEON PRODUCTS ARE PROVIDED "AS IS" WITHOUT ANY REPRESENTATIONS, WARRANTIES, GUARANTIES, OR CONDITIONS OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THOSE OF TITLE, NON-INFRINGEMENT OF ANY INTELLECTUAL PROPERTY RIGHTS, MERCHANTABILITY OR FITNESS OF THE GOODS FOR ANY SPECIFIC PURPOSE, EVEN IF THAT PURPOSE IS KNOWN OR SHOULD BE KNOWN TO MORPHIX TECHNOLOGIES. USER ASSUMES AND ACCEPTS ALL RISK, LIABILITY, AND HARM RESULTING FROM THE USE, ABUSE, OR MISUSE OF THE PRODUCT, WHETHER USED ALONE OR IN COMBINATION WITH OTHER PRODUCTS OR GOODS, AND WHETHER USED FOR ITS INTENDED, SUGGESTED OR OBVIOUS PURPOSE OR OTHERWISE. USER ASSUMES THE ENTIRE RISK AS TO THE RESULTS AND PERFORMANCE OF THE PRODUCT.

IN NO EVENT SHALL MORPHIX TECHNOLOGIES OR ITS OFFICERS, DIRECTORS, SHAREHOLDERS, AGENTS, OR EMPLOYEES BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY OR CONSEQUENTIAL DAMAGES, HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS PRODUCT, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Warning: Keep out of reach of children, if ingested seek medical attention immediately.